

CHANGING THE ANGLE OF THE CAMERA

If you need to adjust the angle of the camera up or down for an event (for example a kids only event) you can adjust the angle of the camera.

NOTE: if you have the option to put the kids on a step, that's the best option (otherwise adults have to be on their knees)



1: open the backdoor of the PhotoBooth

2: the camera is set on a ballhead. The angle can be adjusted by turning the handle loose a bit. Then turn the camera up or down and make sure the handle is turned back again so the camera is fixated.

Make sure the camera is still horizontal and you don't see any edges of the backdrop in the photo.